

## The Yekka Sleeping Pad and Yekka Inflatable Pillow

### How To Inflate

1. Take the product out of the carry bag and unroll it until it is flat.
2. Inflate one air chamber by pulling the top part of the valve (one-way valve), open and blowing to inflate until firm enough to lie on.
3. Close the valve to seal the air.



### Do I Inflate Both Chambers Or Just One?

We recommend using a single chamber and then only using the second one in the event you need a backup.

We also recommend that you **use the inflated chamber on the bottom during use**. That way, if you do get a puncture from the ground surface, your uninflated air chamber is protected on top.




## The Yekka Sleeping Pad and Yekka Inflatable Pillow

### I Have One Chamber Closed And The Other Opened And I Hear Leaking Air From The Other Chamber. Are The Chambers Interconnected?

It is designed not to be interconnected and a likely cause is that **air became trapped** when they were rolled up.

But don't panic, you just need **to open both of the dump valves** on both sides of the products and roll towards the valves to free trapped air.

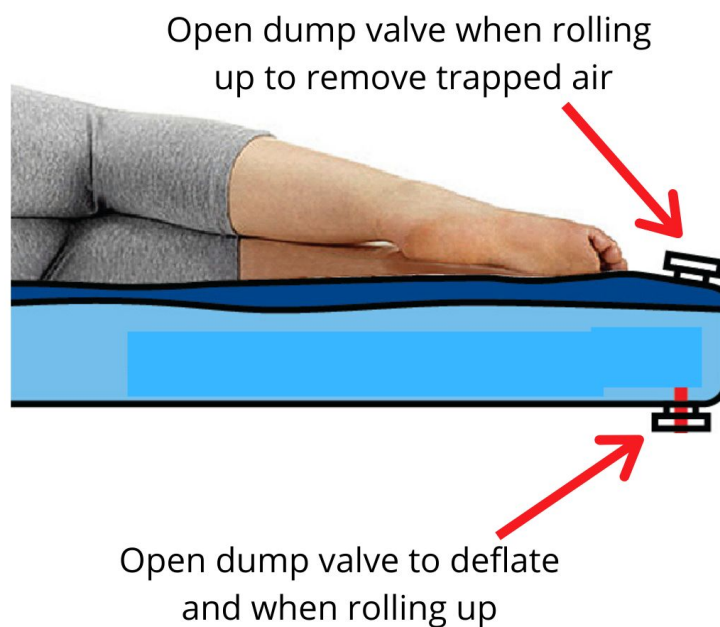

### How Do I Roll It Up?

1. Fold it in half lengthways.
2. Fold it again into quarters lengthwise with the valves on the outside.
3. Roll from the end without the valves and towards the valves to push air out. Both dump valves need to be open to removing all air.

### How Should I Store It?

Rolled up loosely in its bag, in a safe place and with low moisture.